

WG

Willis & Gambier

Thank you from Willis & Gambier

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Willis & Gambier using the hashtag #ShareYourStyle and #WillisGambier . One winner will be selected at random each month.

To view our full terms and conditions please visit www.willisgambier.co.uk

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels. Your feedback will be greatly appreciated.

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



WG

Willis & Gambier

Antoinette Collection


3 Door Wardrobe








Step By Step Assembly Instructions

PRE-ASSEMBLY PREPARATION

1. Please check the part contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.
2. This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.
3. This product takes approximately 90 MINUTES to assemble with **2 PEOPLE**.
4. The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.
5. Read this leaflet in full before commencing assembly.
6. You will require a cross head screwdriver to assemble this product.
7. **WE RECOMMEND** that you lay a protective cloth on your carpet to prevent marking.

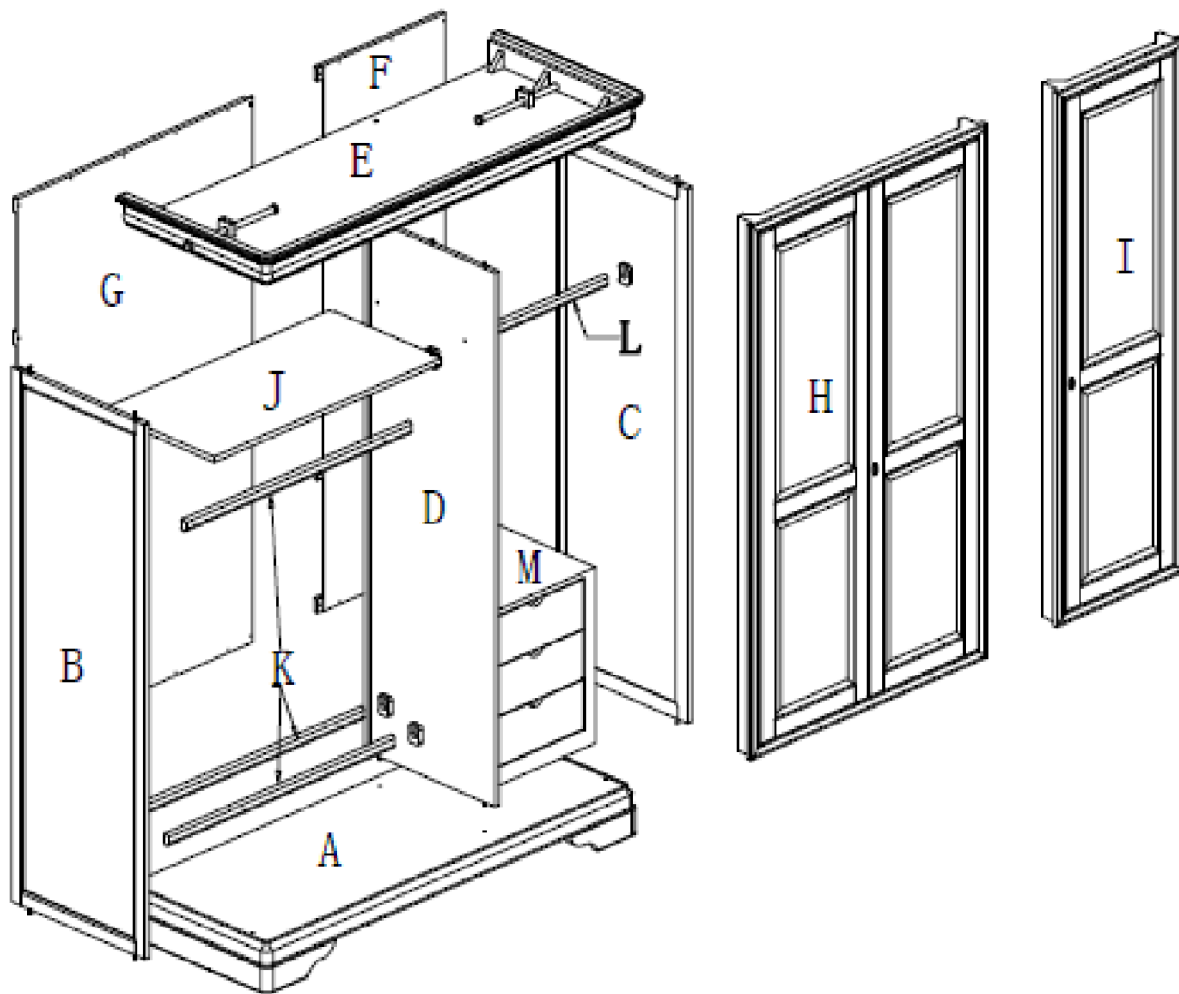

Panel and Fittings Identification


Item	Description	Qty.	Item	Description	Qty.	Item	Description	Qty.
A	Base	1	B	Left Side Panel	1	C	Right Side Panel	1
D	Centre Upright Panel	1	E	Top Cornice	1	F	Narrow Back Panel	1
G	Wide Back Panel	1	H	Wide Door Frame	1	I	Narrow Door Frame	1
J	Shelf	1	K	Wide Hanging Rail	3	L	Narrow Hanging Rail	1
M	Drawer Frame	1	N	30mm CSK Screws 	46	O	25mm CSK Screws 	27
P	Shelf Pin 	4	Q	16mm CSK Screws 	4	R	Door Key 	2

Step ① With the aid of an assistant, locate the left side panel (B), the right side panel (C) and the centre upright panel (D) to the base unit (A), using the 30mm CSK screws (N) at the bottom of each panel and dowels


Fittings



N x 3

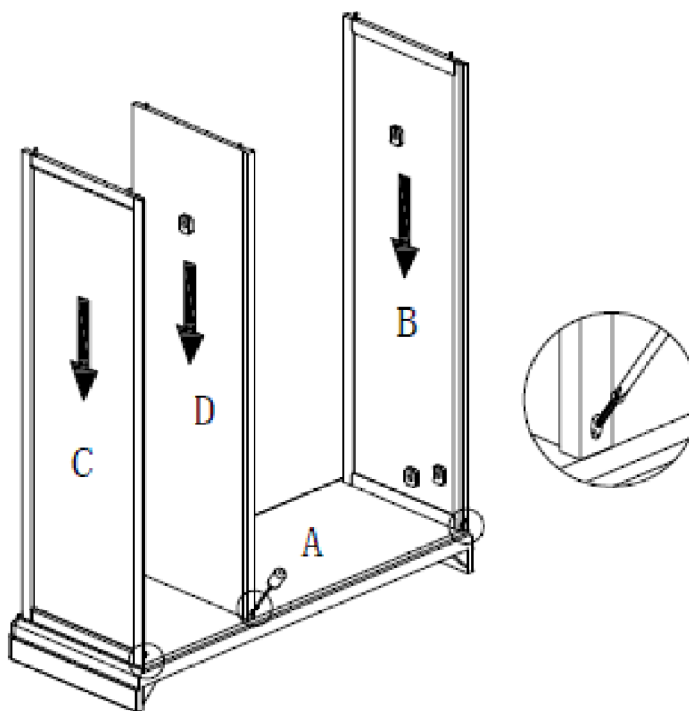

Step ② Insert the drawer frame (M) into the narrow compartment of the wardrobe as shown.

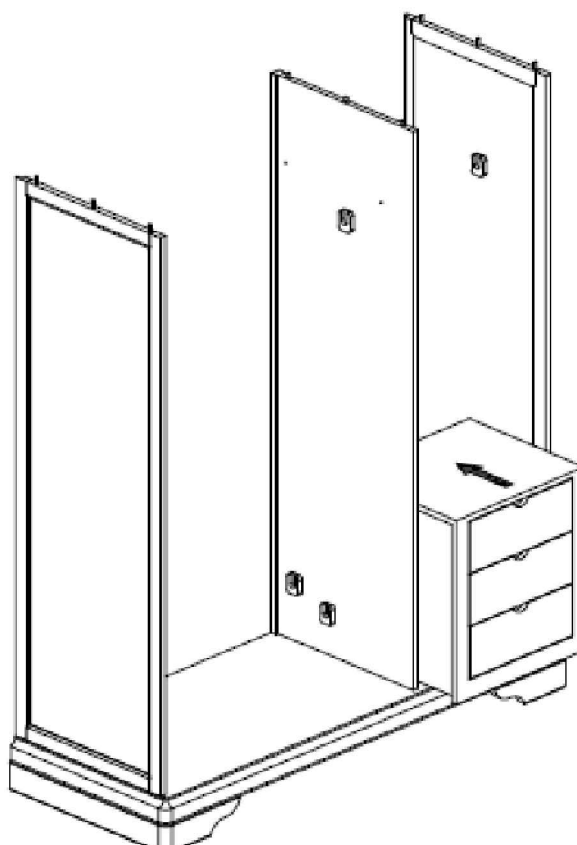


Step ① With the aid of an assistant, locate the left side panel (B), the right side panel (C) and the centre upright panel (D) to the base unit (A), using the 30mm CSK screws (N) at the bottom of each panel and dowels


Fittings



N x 3

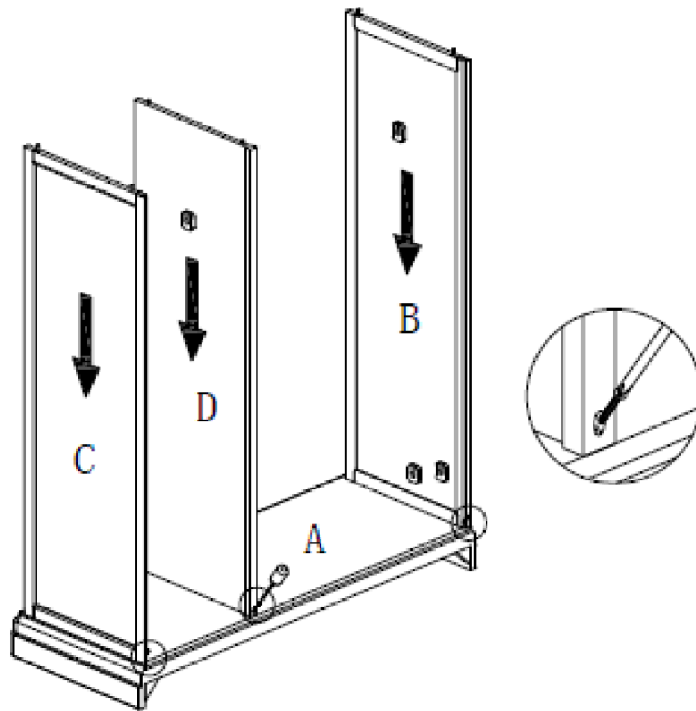

Step ② Insert the drawer frame (M) into the narrow compartment of the wardrobe as shown.

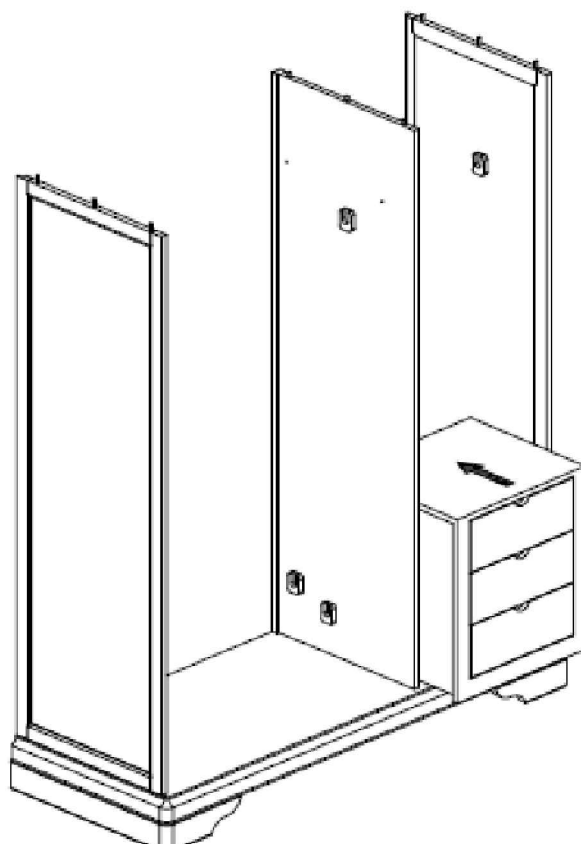


Step ① With the aid of an assistant, locate the left side panel (B), the right side panel (C) and the centre upright panel (D) to the base unit (A), using the 30mm CSK screws (N) at the bottom of each panel and dowels


Fittings



N x 3

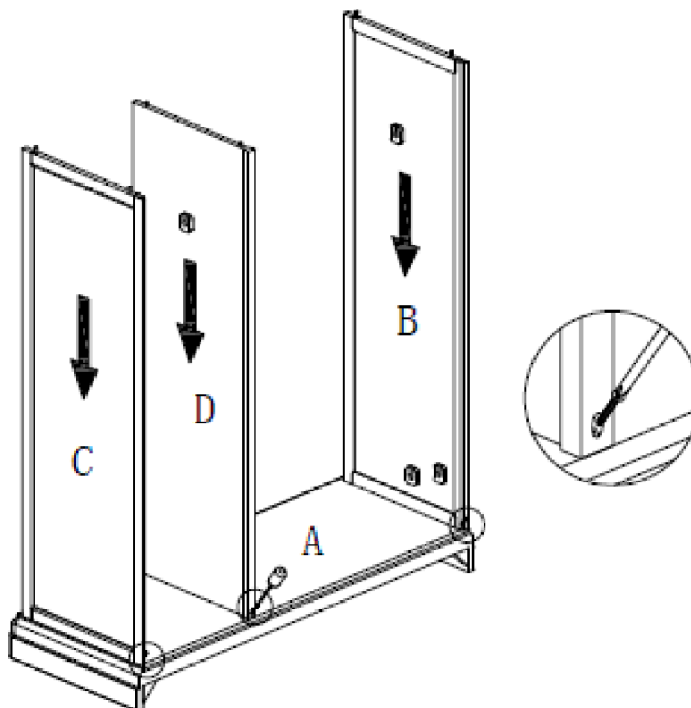

Step ② Insert the drawer frame (M) into the narrow compartment of the wardrobe as shown.

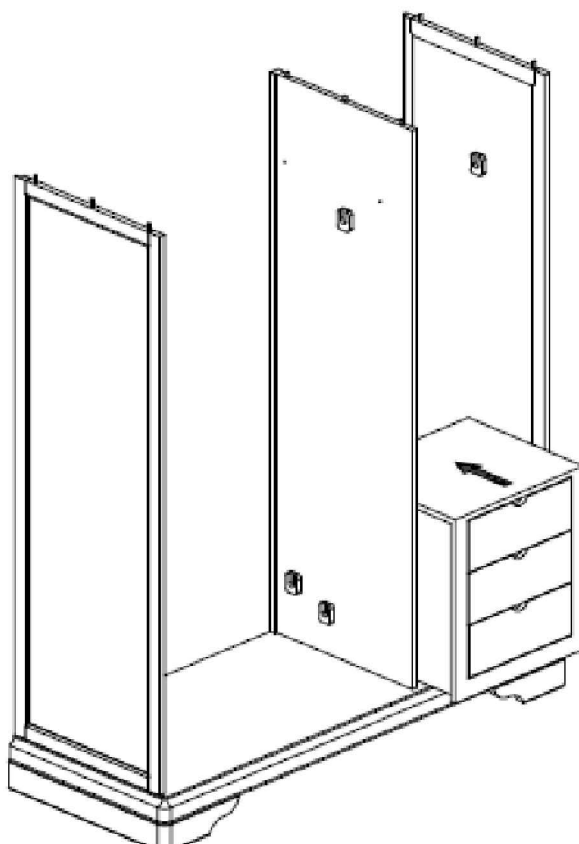


Step ① With the aid of an assistant, locate the left side panel (B), the right side panel (C) and the centre upright panel (D) to the base unit (A), using the 30mm CSK screws (N) at the bottom of each panel and dowels


Fittings



N x 3

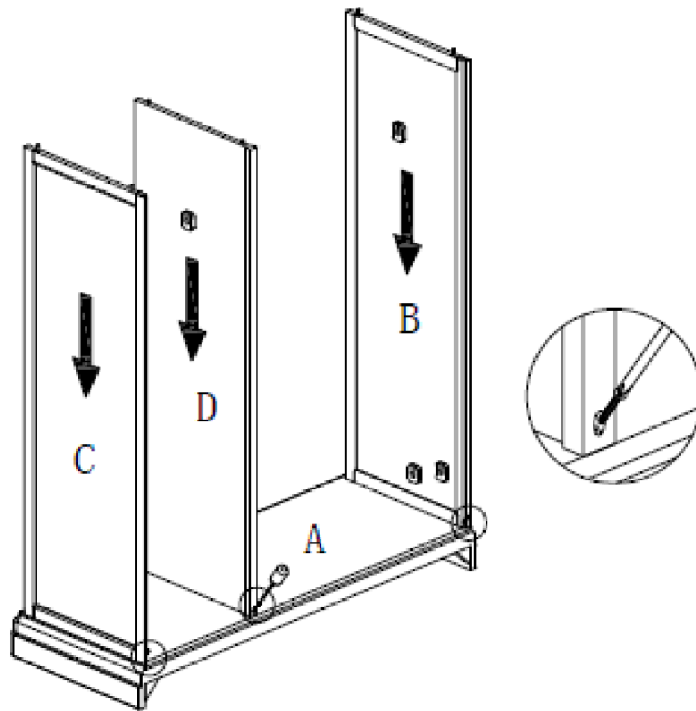

Step ② Insert the drawer frame (M) into the narrow compartment of the wardrobe as shown.

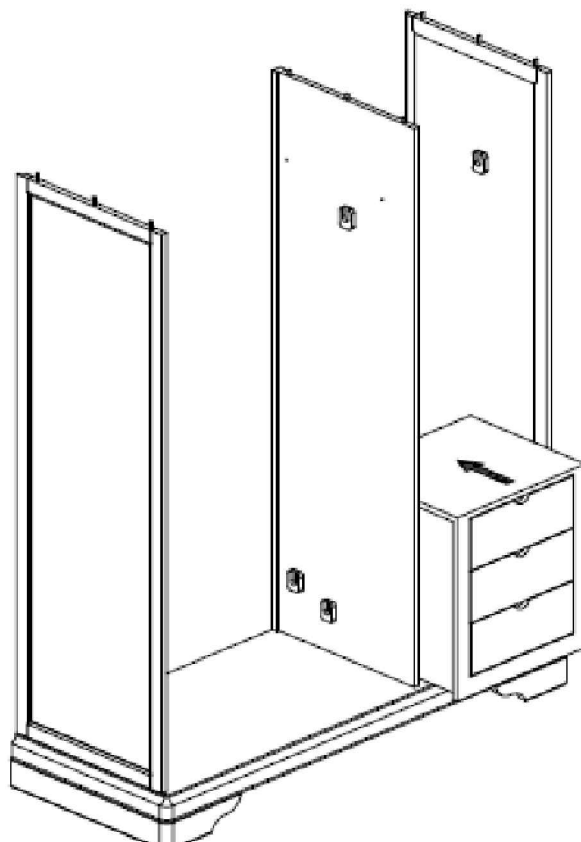


Step ① With the aid of an assistant, locate the left side panel (B), the right side panel (C) and the centre upright panel (D) to the base unit (A), using the 30mm CSK screws (N) at the bottom of each panel and dowels


Fittings



N x 3

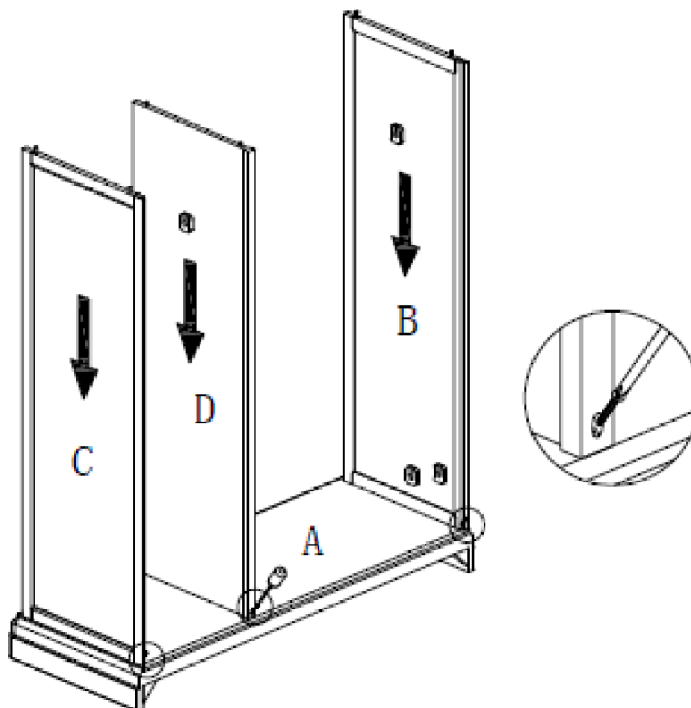

Step ② Insert the drawer frame (M) into the narrow compartment of the wardrobe as shown.

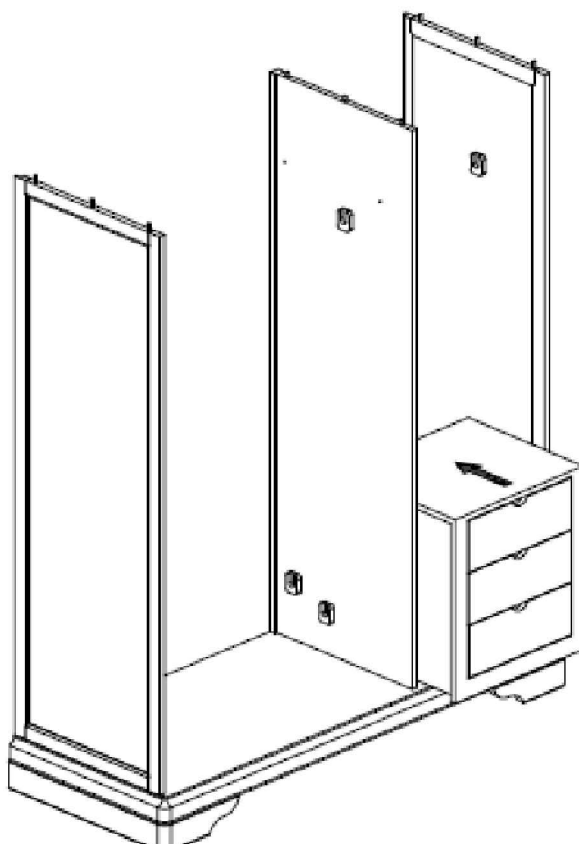


Step ① With the aid of an assistant, locate the left side panel (B), the right side panel (C) and the centre upright panel (D) to the base unit (A), using the 30mm CSK screws (N) at the bottom of each panel and dowels


Fittings



N x 3

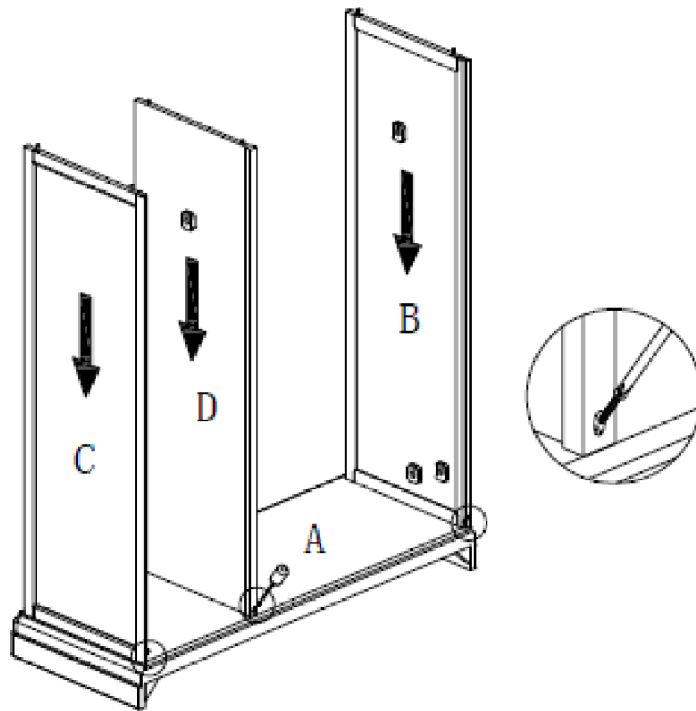

Step ② Insert the drawer frame (M) into the narrow compartment of the wardrobe as shown.

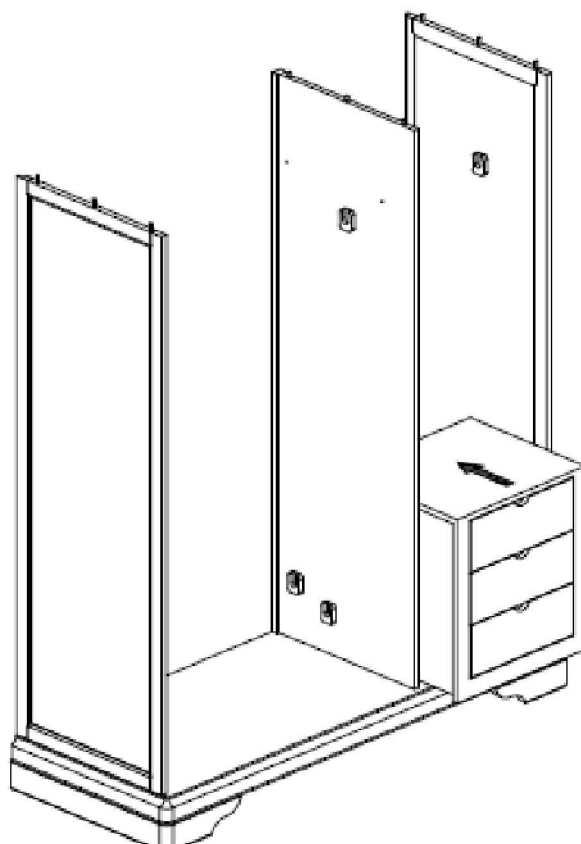


Step ③ **IMPORTANT NOTE: PLEASE ENSURE THE DOORS ARE UNLOCKED PRIOR TO ASSEMBLY** With the aid of an assistant, locate the wide door frame (H) onto the wardrobe and locate the narrow door frame (I) onto the wardrobe as shown.

Fittings



N x 31

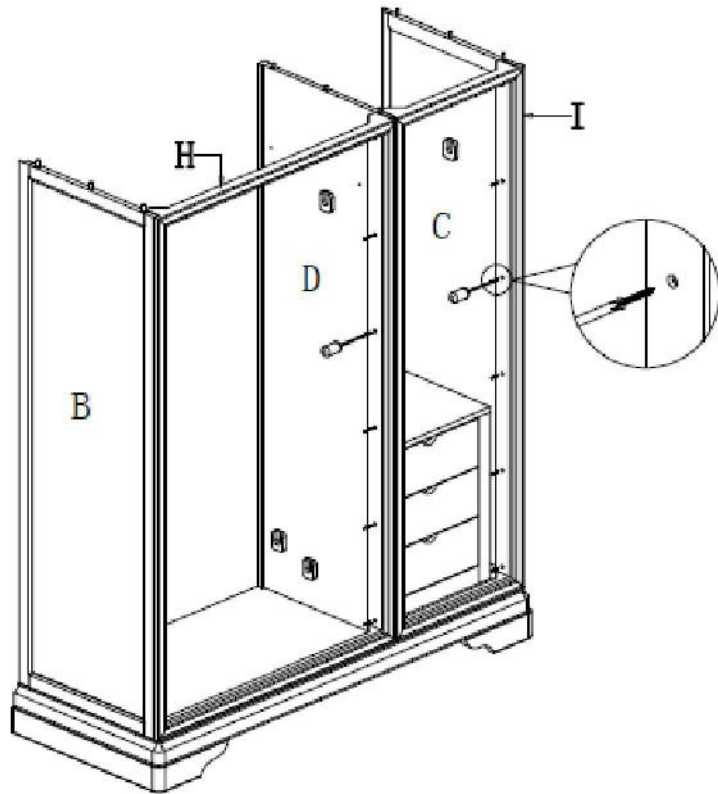


**SHOWN WITH DOORS
REMOVED FOR CLARITY
OF ILLUSTRATION ONLY**

Step ④ With the aid of an assistant, locate the cornice (E) as shown. Secure using 30mm CSK screws (N), three for each panel and four into the top of the door frames.

Fittings




N x 12

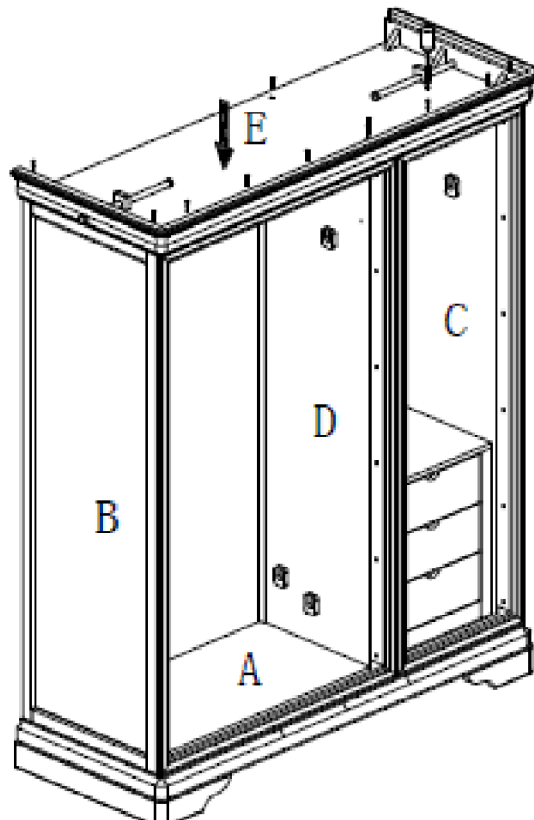

**SHOWN WITH DOORS
REMOVED FOR CLARITY
OF ILLUSTRATION ONLY**

Step ⑤ Before attaching the back panels (F & G), move the wardrobe close to the position where it will be used. With uneven floors you may need to lean the wardrobe slightly left or slightly right to ensure that the doors remain square. With the help of an assistant, hold the wardrobe in position and secure the wide back panel (G) to the rear of the wardrobe. **DO NOT SECURE TO THE CENTRE PANEL YET.** Finally, secure the narrow back panel (F) noting that it overlaps the wide back panel. Tighten all 25mm CSK screws (O).

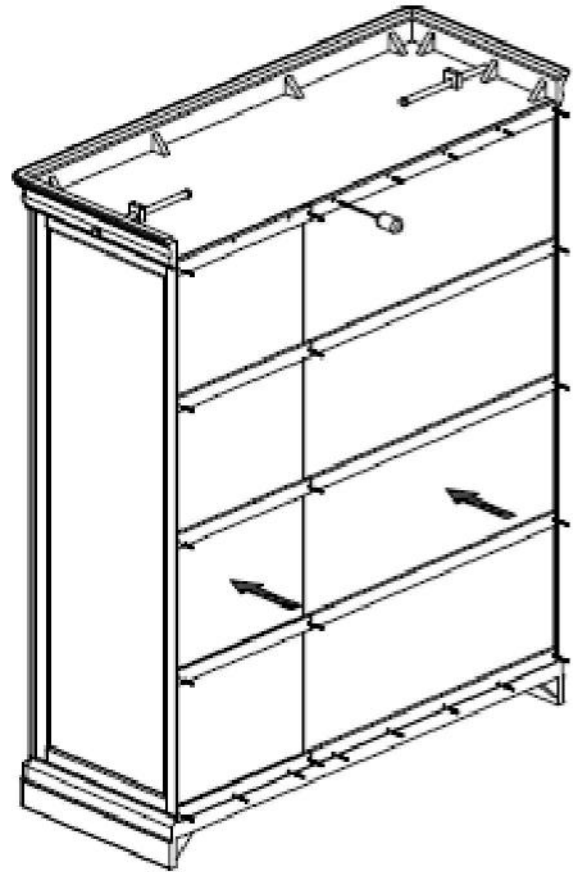

Fittings



 O x 27

Step ⑥ Push fit the four shelf pins (P) at the desired heights. Locate the shelf (J) noting the 'Notched' corners as shown. Screw the screws (Q) into the underside of the shelf through the pins. Then push fit the hanging rail (K & L) to the hanging rail supports.

Fittings





 Q x 4

 P x 4

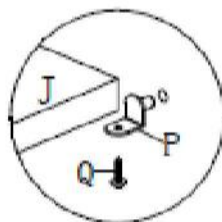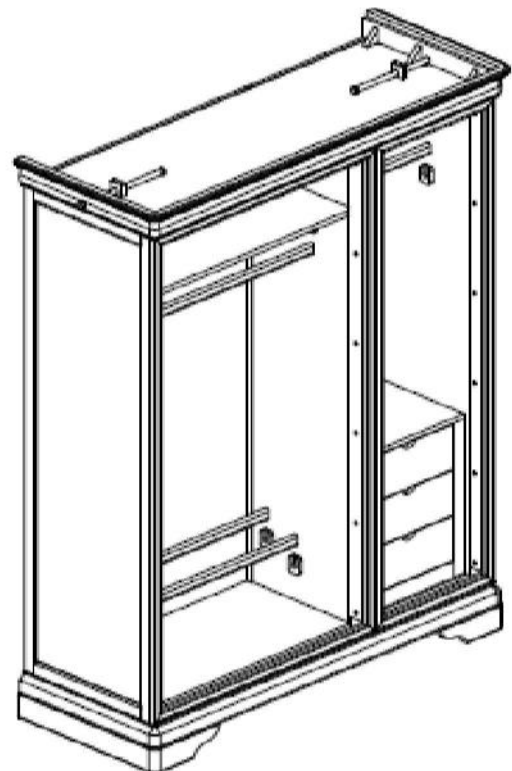

SHOWN WITH DOORS
REMOVED FOR CLARITY
OF ILLUSTRATION ONLY

Step ⑦ Move the wardrobe into position and then check that the doors are aligned correctly. If necessary adjust the door hinges as shown below.

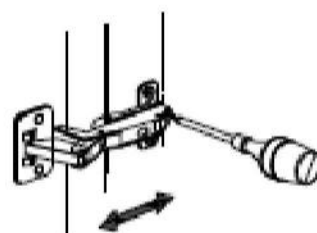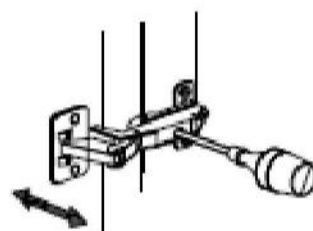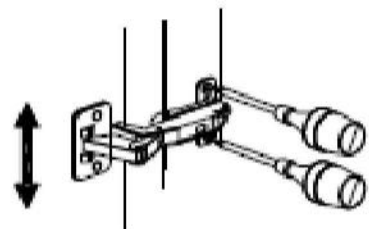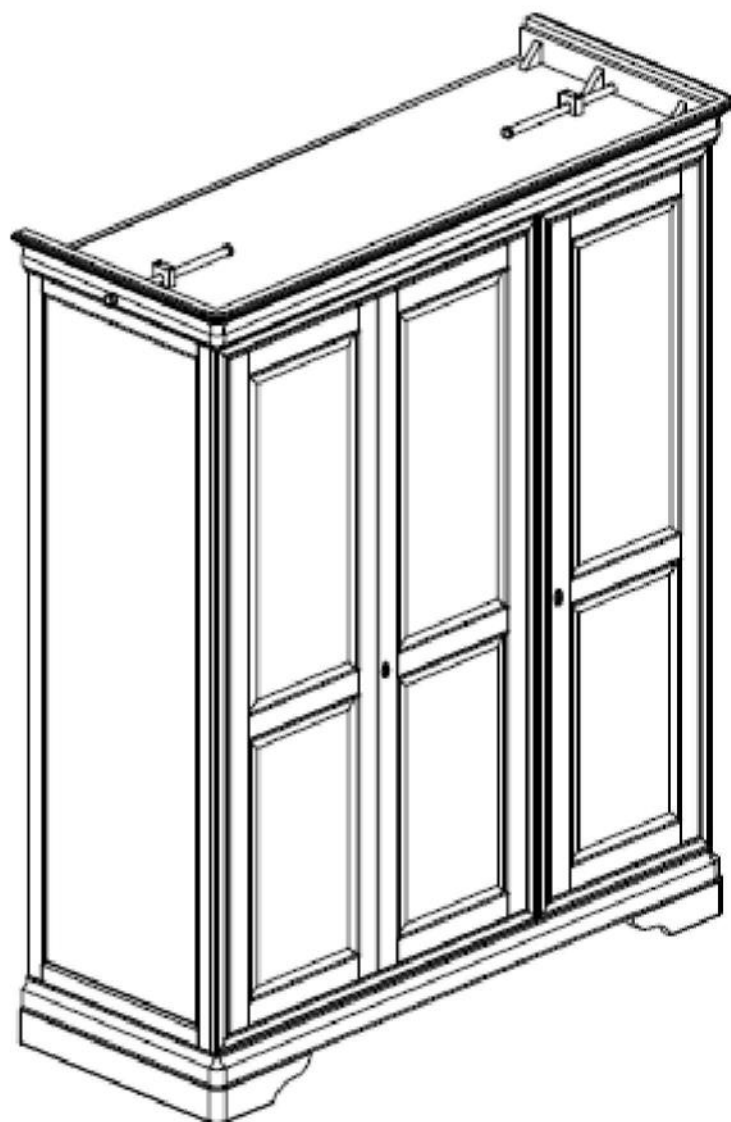

Antoinette Collection

3 Door Wardrobe

It may be required to adjust the top and bottom locking pins on the door frame, enabling the hooks to locate and lock onto the pin. If required loosen and remove screws on the pin and locate into the correct position, then re-attach the screws. The pins can be moved in the directions shown in the diagram.

