

# WG

Willis & Gambier

## Thank you from Willis & Gambier

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Willis & Gambier using the hashtag #ShareYourStyle and #WillisGambier . One winner will be selected at random each month.

To view our full terms and conditions please visit [www.willisgambier.co.uk](http://www.willisgambier.co.uk)

### Are you happy with your purchase?

*Yes:* That's great, we would love to hear more from you. Please leave us a review on our social media channels. Your feedback will be greatly appreciated.

*No:* If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.




## Camille Bedroom Collection

135cm Low End Bedstead (Product Code CA/3388N)  
150cm Low End Bedstead (Product Code CA/3389N)  
180cm Low End Bedstead (Product Code CA/3390N)

135cm High End Bedstead (Product Code CA/3391N)  
150cm High End Bedstead (Product Code CA/3392N)  
180cm High End Bedstead (Product Code CA/3393N)

---

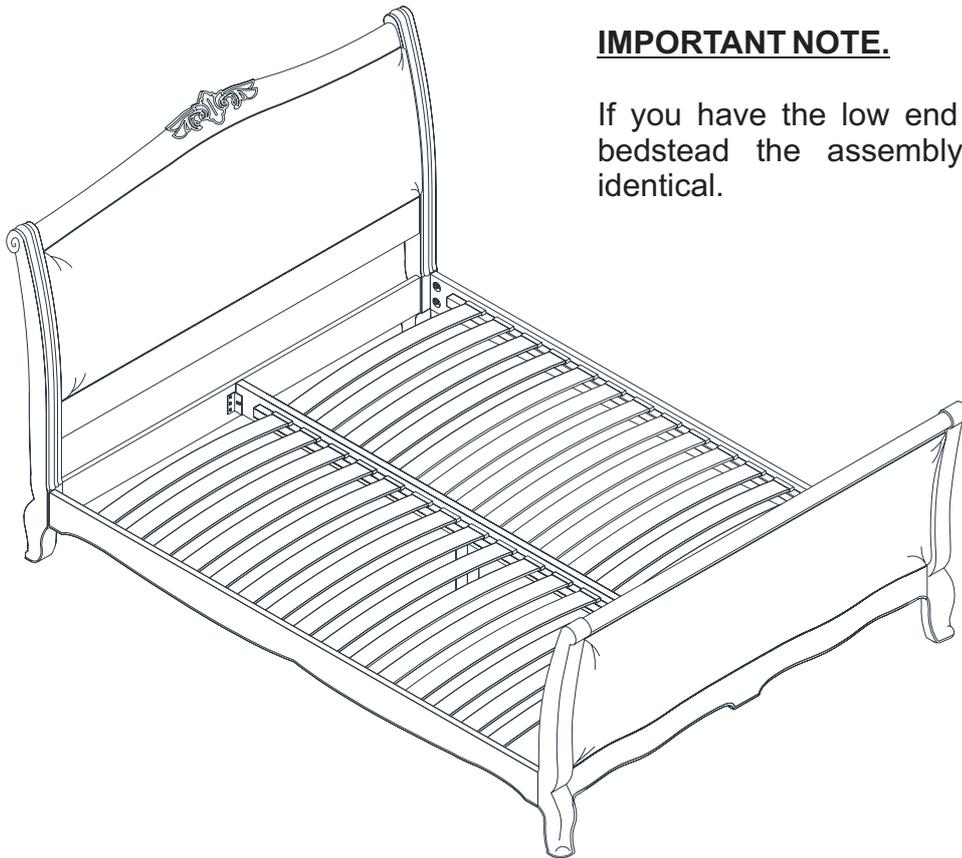

### IMPORTANT NOTE.

If you have the low end version of this bedstead the assembly procedure is identical.


---

# Step By Step Assembly Instructions



---

## PRE-ASSEMBLY PREPARATION

1. Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.
2. This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.
3. This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.
4. The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.
5. Read this leaflet in full before commencing assembly.
6. You will require a crosshead screwdriver and an open ended spanner to assemble this product.

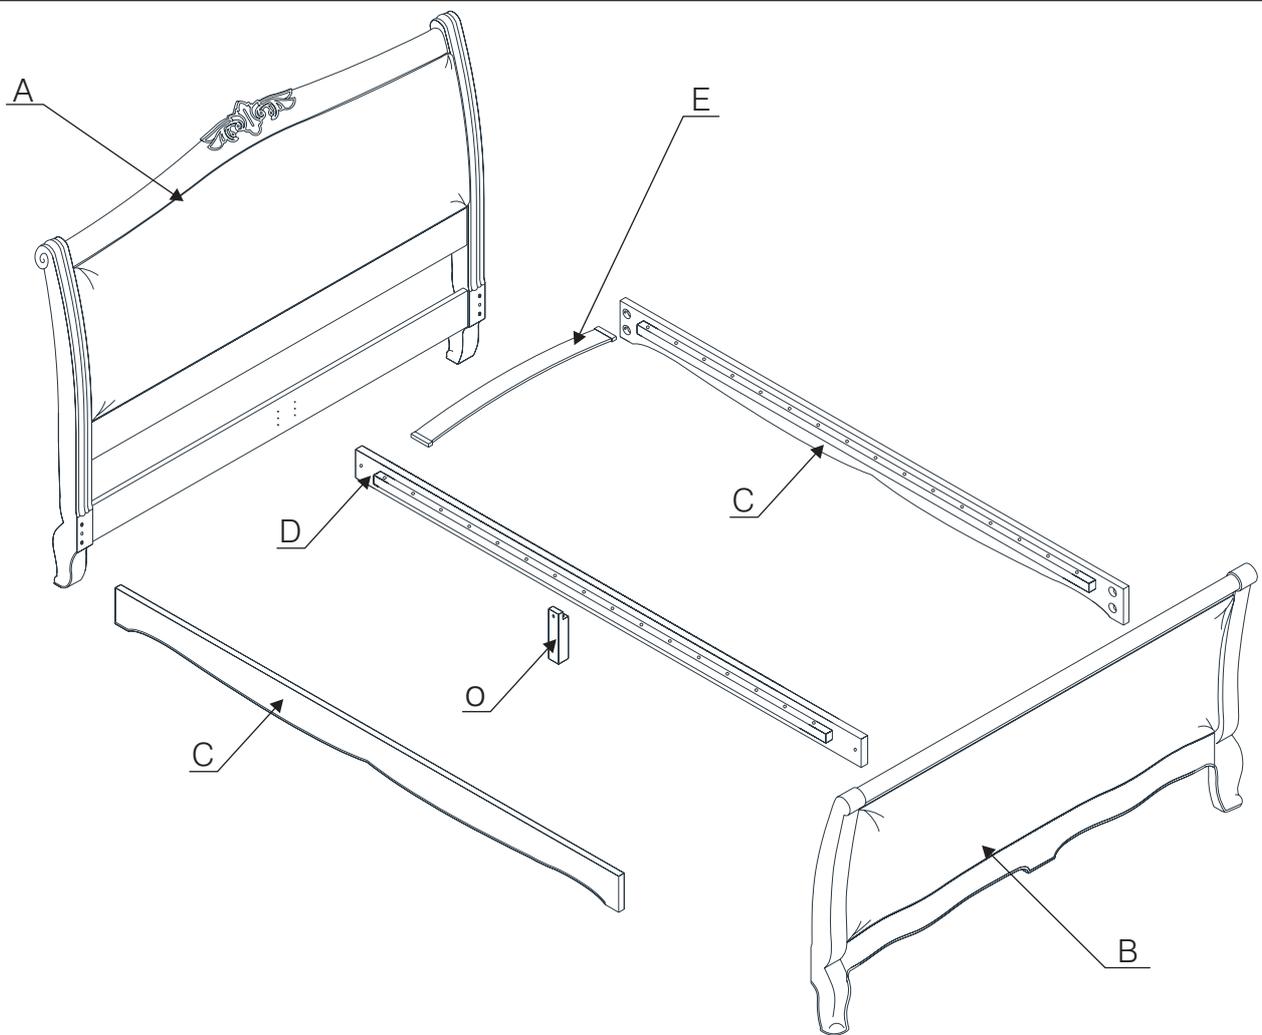

### Panel and Fittings Identification

Item	Description	Qty.	Item	Description	Qty.	Item	Description	Qty.
A	Headboard	1	B	Footboard	1	C	Side Rail	2
D	Centre Rail	1	E	Slat 135cm bedstead 150/180cm bedstead	32 34	F	Thread 	8
G	Nut & Washer 	8	H	Open Ended Spanner 	1	I	20mm CSK Screw 	12
J	40mm Bolt 	2	K	Nut & Washer 	2 set	L	Plastic Cap (Provided with slats) 	
M	Bracket 	2	N	Wood Dowel 	4		135cm bedstead 150/180cm bedstead	64 68
O	Centre Rail Support Leg 	1	P	45mm Bolt & Washer 	1 set			


**Step 1**

Insert the four wooden dowels (N) into the headboard and footboard. This will assist in the alignment of the siderail. Screw the eight threads (F) into the headboard and footboard and tighten by hand.

Fittings






F x 8



N x 4

A

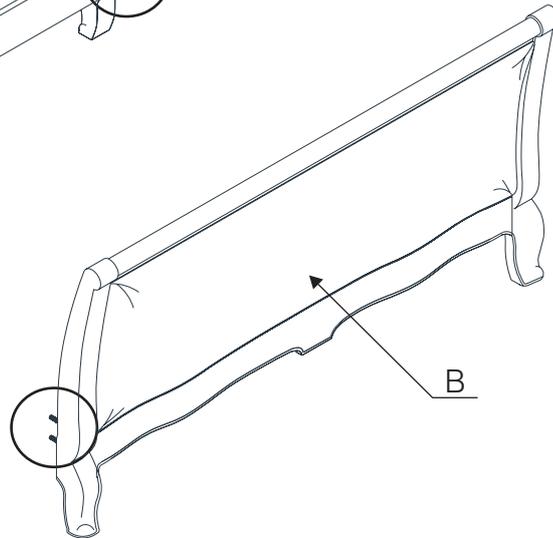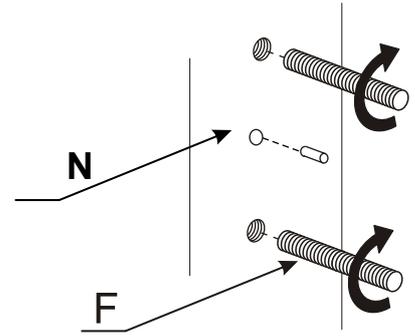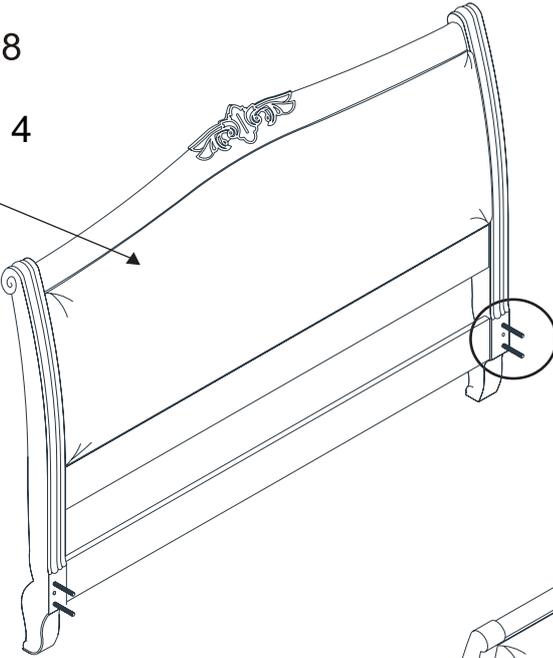

B


**Step 2**

Locate the side rails onto the threads protruding from the headboard. Locate the washer & Nut (G) onto the threads and secure by hand at first. Tighten evenly using the open ended spanner (Provided).

Fittings




G x 4

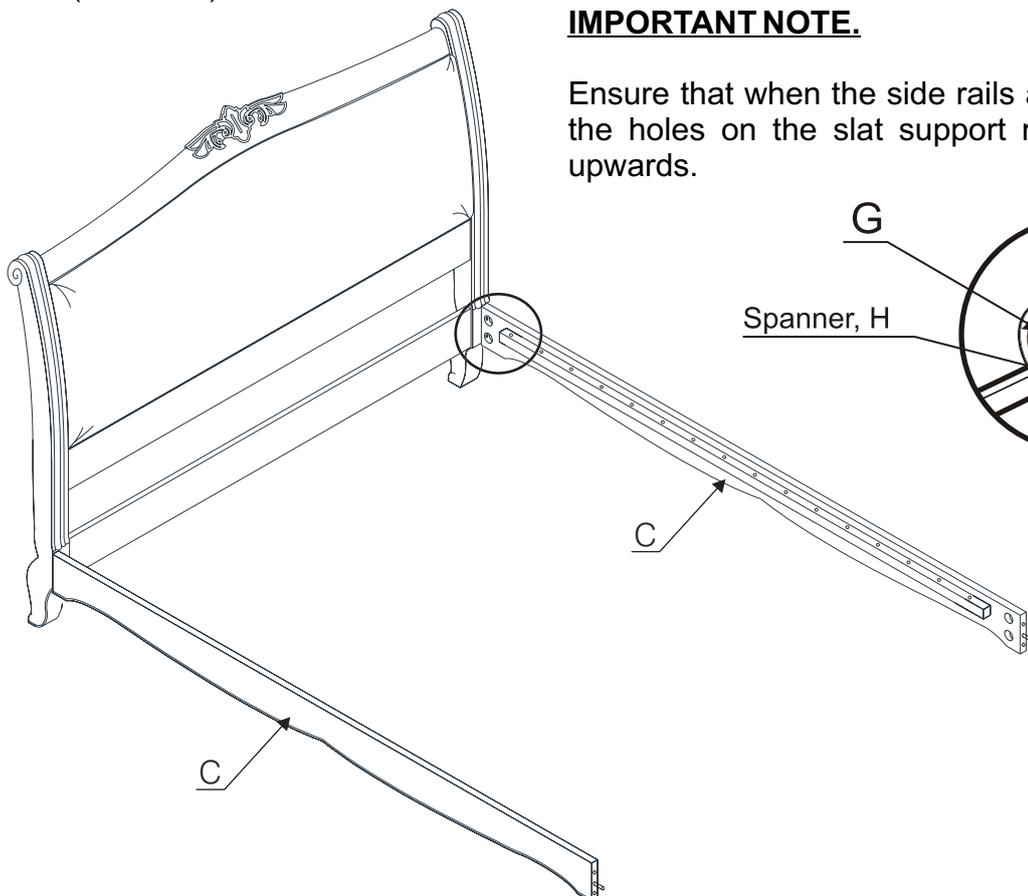

**IMPORTANT NOTE.**

Ensure that when the side rails are in position the holes on the slat support rail are facing upwards.

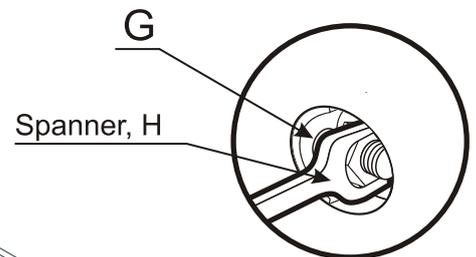



Spanner, H

**Step 3** - Locate the side rails onto the threads protruding from the footboard. Locate the washer & nut onto the threads and secure by hand at first. Tighten using the open ended spanner (Provided).

Fittings



G x 4

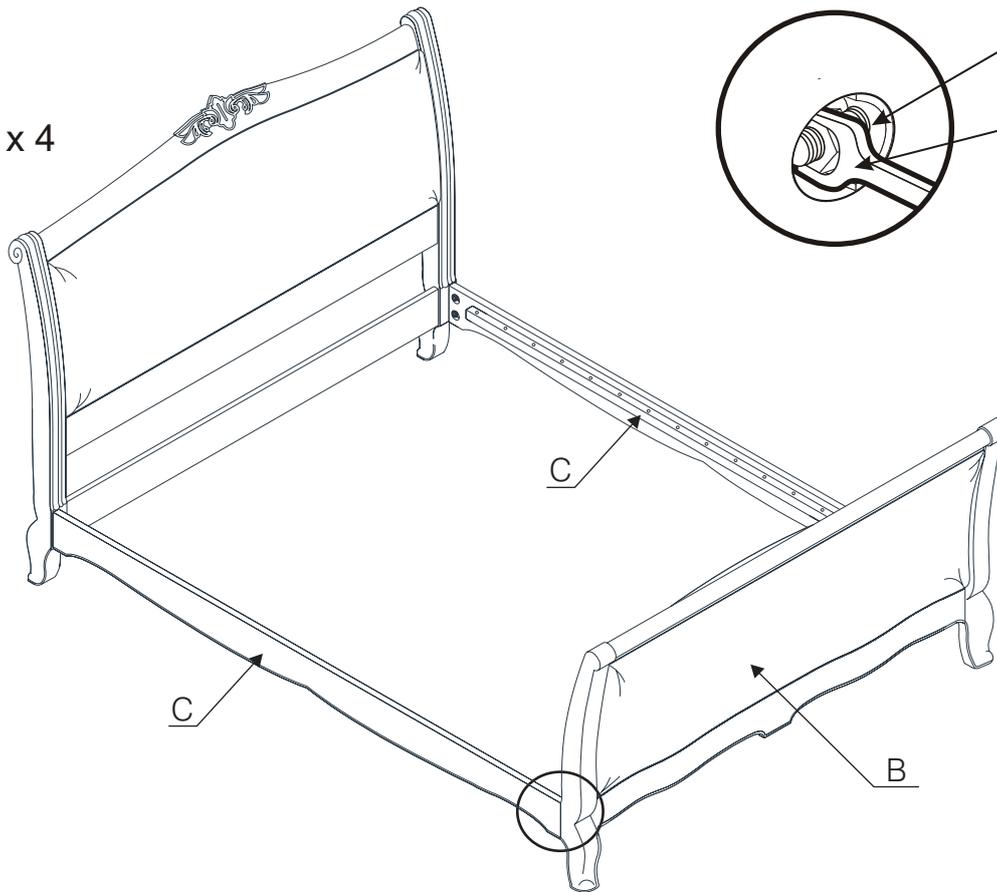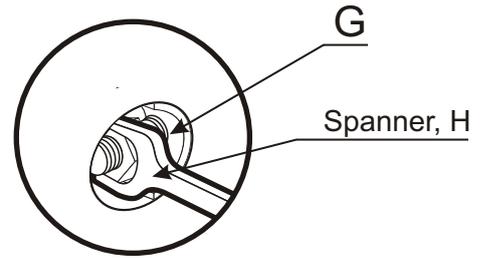


**Step 4** - Attach the brackets (M) to the headboard and footboard using the screws (I) inserted into the pre-drilled pilot holes. Tighten using a crosshead screwdriver.



Fittings



I x 12




M x 2

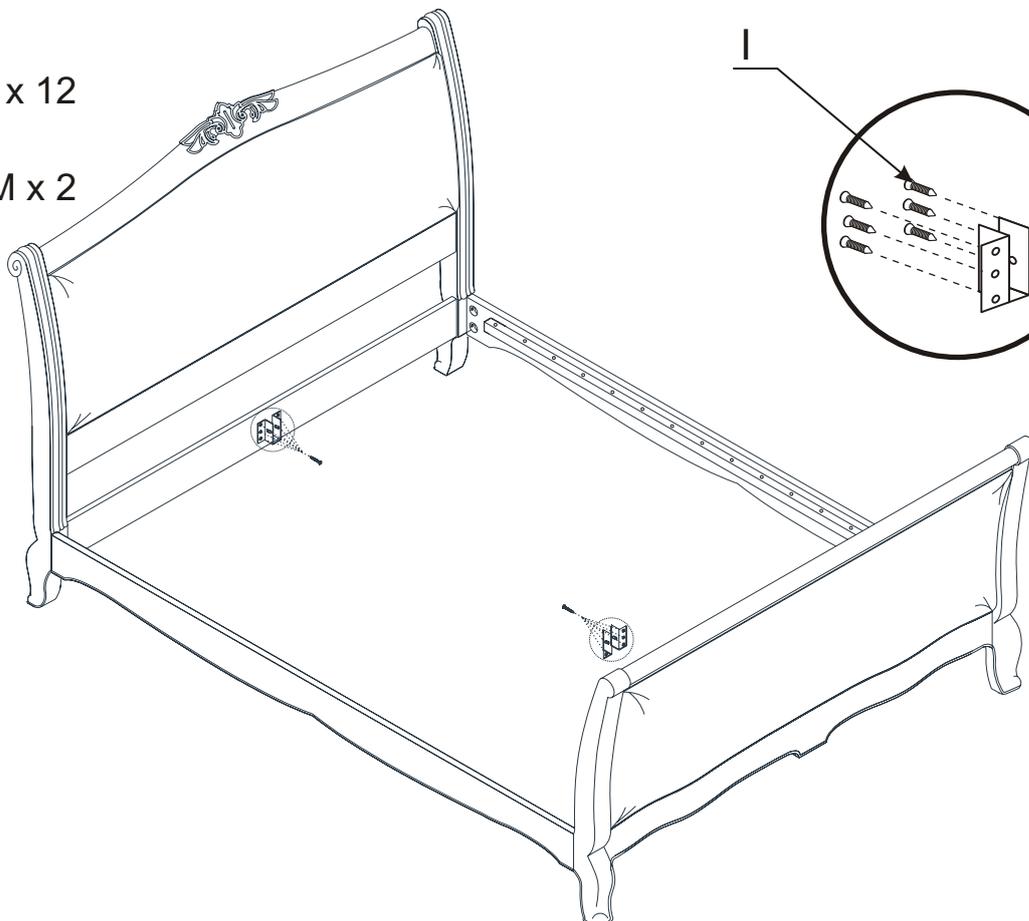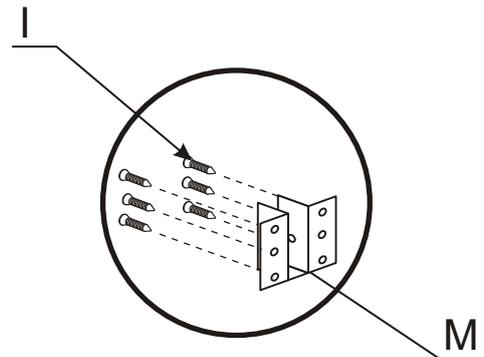

- Step 5** - First attach the centre rail support leg(O) into the underneath of the centre rail(D), and secure using the bolt and washer(P).  
 - Locate the centre rail(D) into the headboard and footboard brackets, and secure using the nuts(K) and bolts(J). Tighten using the open ended spanner(H)

Fittings

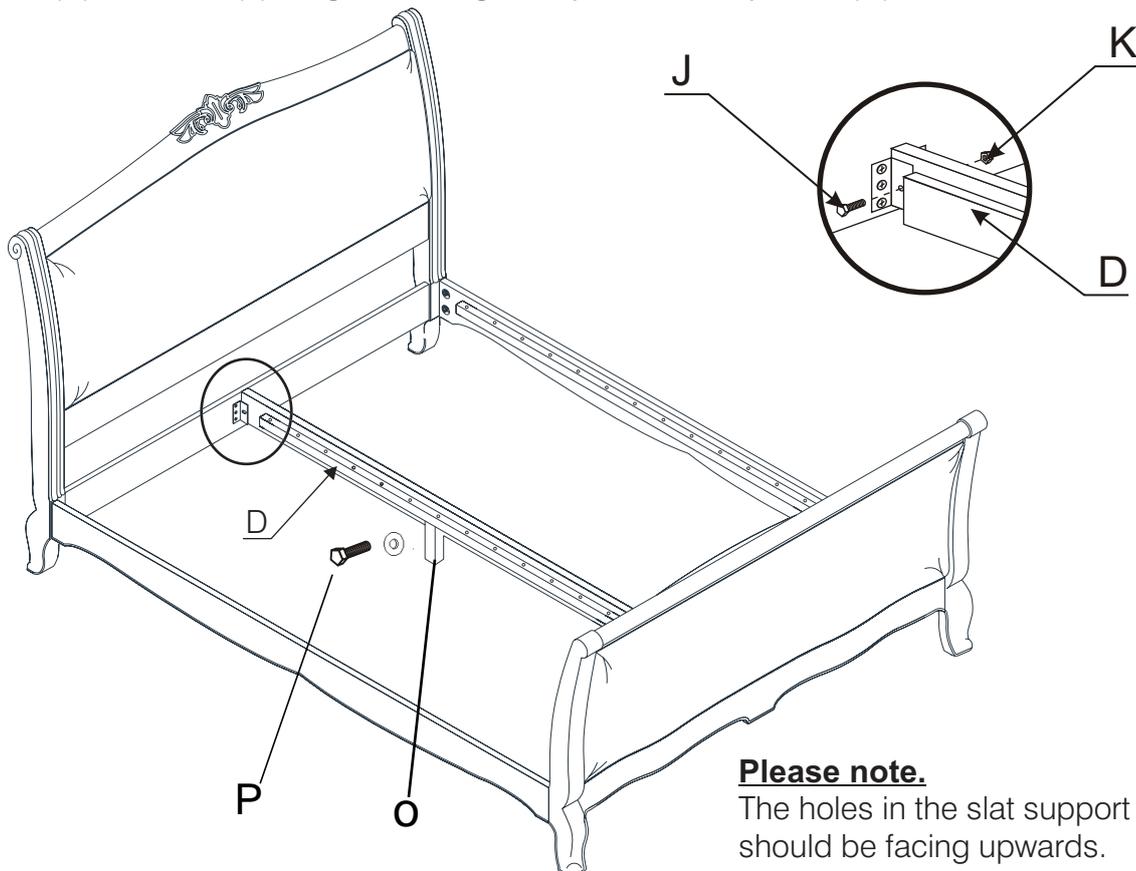

**Please note.**

The holes in the slat support rail should be facing upwards.

- Step 6** - Push fit two plastic caps onto either end of the slat. Push fit the slat into the pre-drilled pilot holes. Please note that it may require a light tap with a soft hammer to secure the plastic end caps into the holes. Repeat this step with the other 31/ 33 slats.  
 The assembly is now complete.

Fittings

