

WG

Willis & Gambier

Thank you from Willis & Gambier

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Willis & Gambier using the hashtag #ShareYourStyle and #WillisGambier . One winner will be selected at random each month.

To view our full terms and conditions please visit www.willisgambier.co.uk

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels. Your feedback will be greatly appreciated.

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.






Willis & Gambier

Etienne Collection

Grey 135cm Headboard (Product Code ET/1368G)

Grey 150cm Headboard (Product Code ET/1371G)


Grey 180cm Headboard (Product Code ET/1372G)

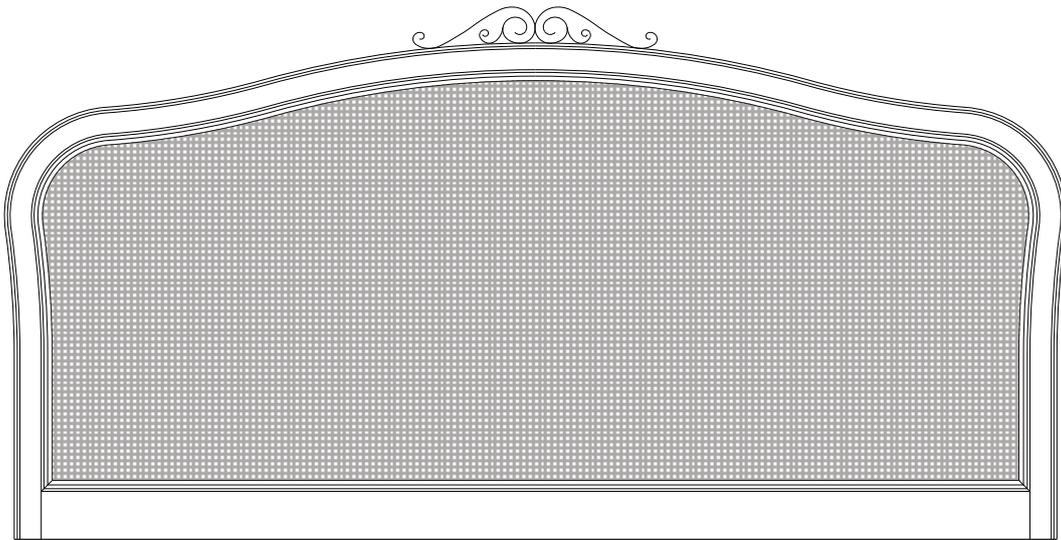


Step By Step Assembly Instructions

PRE-ASSEMBLY PREPARATION

1. Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.
2. This product takes approximately **20 MINUTES** to install .
3. The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.
4. Read this leaflet in full before commencing assembly.
5. You will require a crosshead screwdriver to install this product.
6. The instruction in this leaflet applies to a 4'6" headboard but the procedure is exactly the same for all sizes.

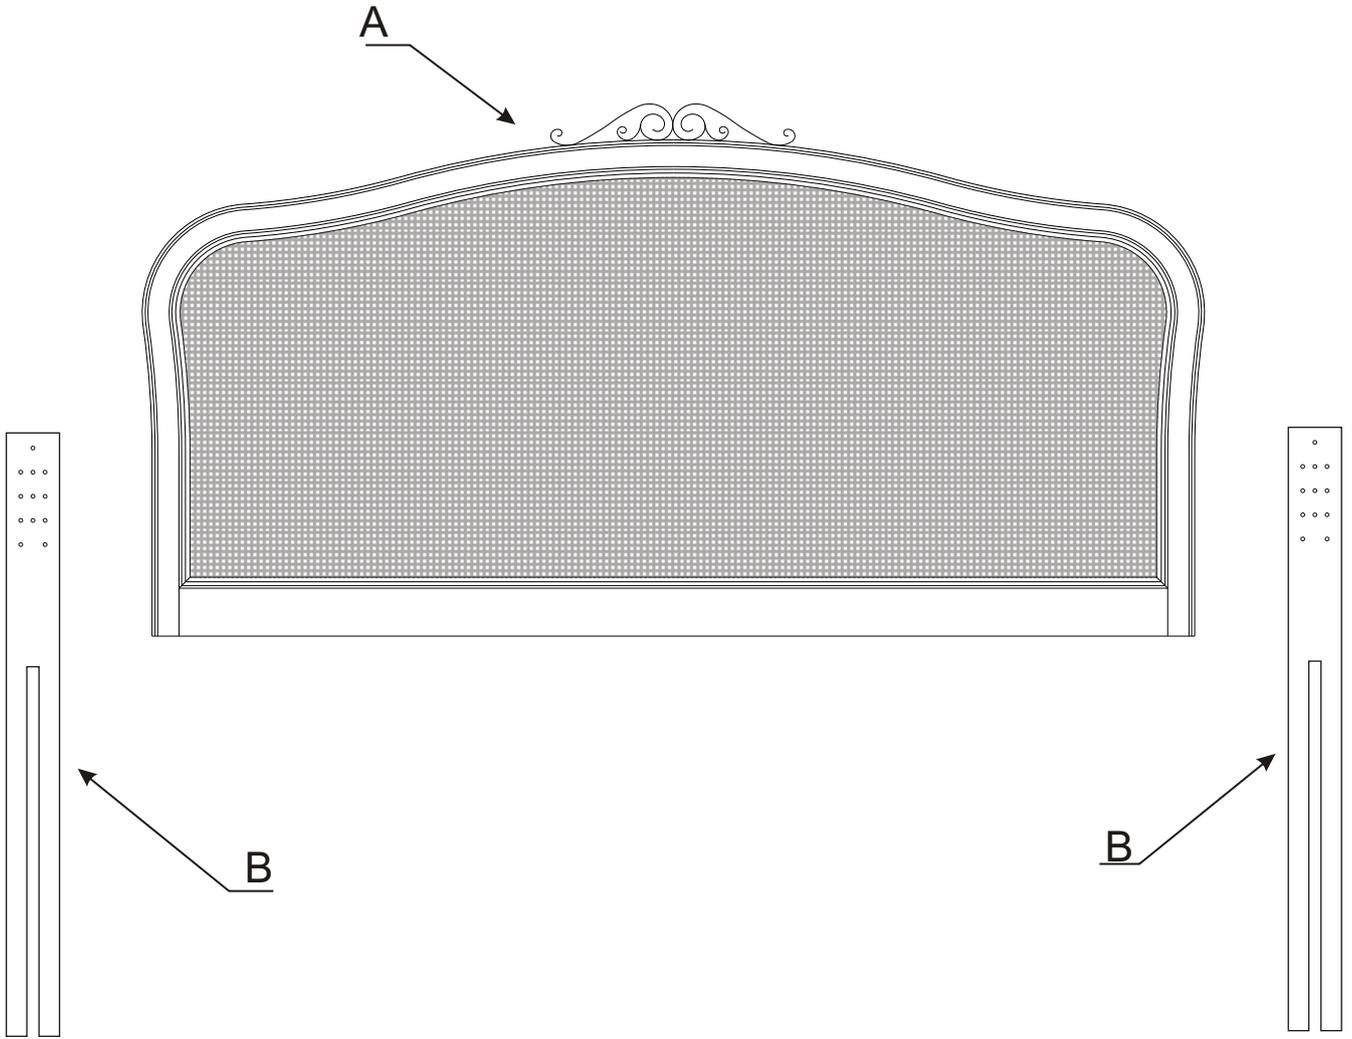


Panel and Fittings Identification

Item	Description	Qty.	Item	Description	Qty.	Item	Description	Qty.
A	Headboard	1	B	Strut	2	C	30mm CSK Screw	6
								

Step 1 - To support the weight of the headboard, the struts are designed to rest on the floor. Therefore they can be attached at different heights according to the thickness of your mattress. The thinner the mattress the higher up the struts are attached. Attach struts (B) to the headboard (A) using six 30mm screws (C), in the required position.

Fittings

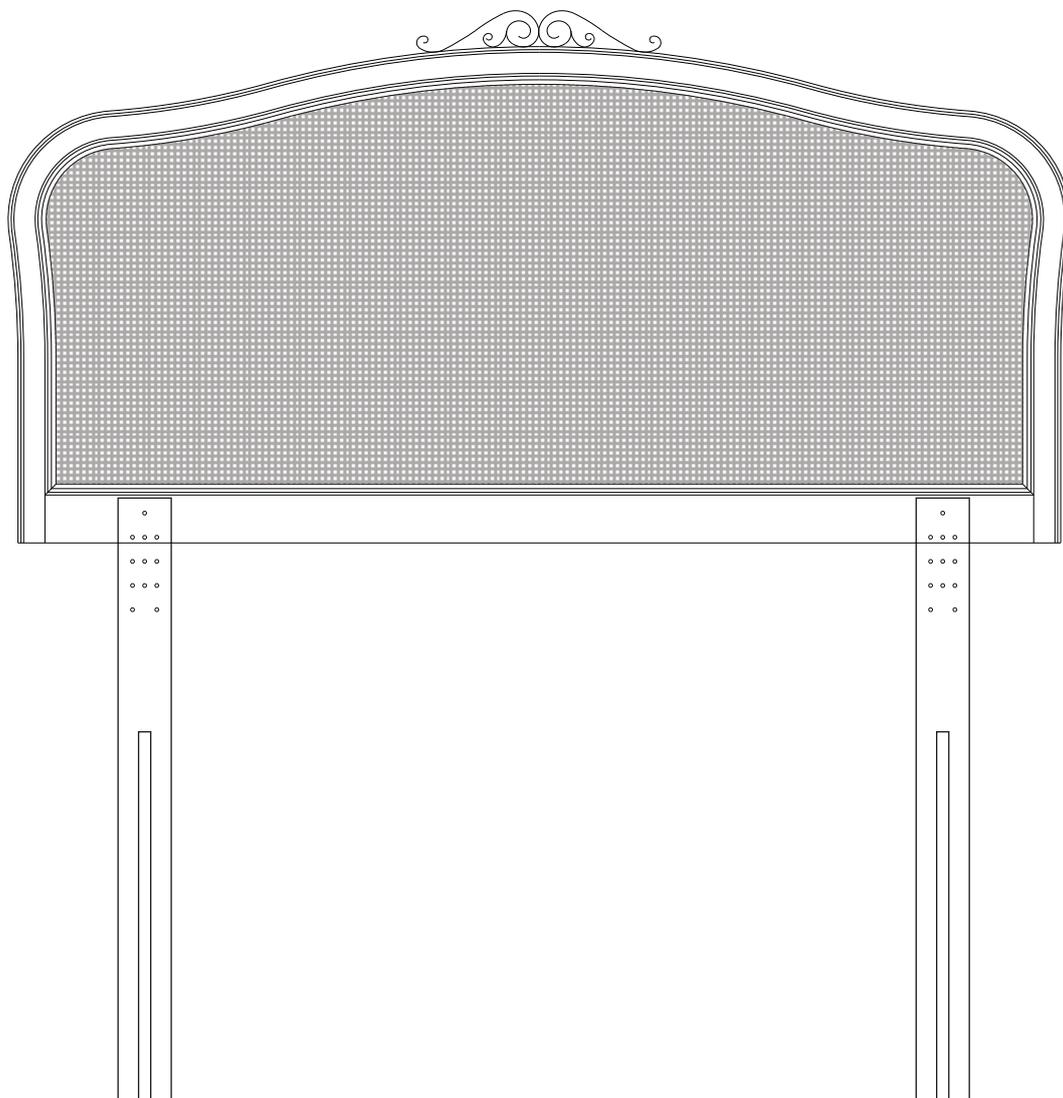

Step 2 - Slot the headboard onto the bed base.
With the headboard placed into the correct position, tighten the pins to secure.
The installation is now complete.

